

# Remote Controller

## Introduction of Remote



-  **POWER:** Press to turn on/off the player.
-  **MUTE:** Press to close the volume of the player.
-  **SUB:** Press to open/close the subtitle when use DVB player playing videos.
-  **TTX:** Press to start teletext function when use DVB player.
-  **AUDIO:** Press to choose audio output when playing movies.
-  **MOUSE:** Press to use the navigation button as mouse.
-  **EPG:** Press to enter into EPG page when use DVB player.
-  **INFO:** Press to know the detail information of channels when use DVB player.
-  **TV/RADIO:** Press to change between TV and Radio.
-  **REC:** Press to start video recorder function when use DVB player.
-  **DTV:** Fast key to go to DVB player.
-  **VIDEO:** Fast key to go to video playlist.
-  **MUSIC:** Fast key to go to music playlist.
-  **PHOTO:** Fast key to go to photo gallery.
-  **APP:** Fast key to go to android application.
-  **SETTING:** Fast key to go to system settings.
-  **WEB:** Fast key to go to web navigation.
-  **SEARCH:** Fast key to go to website search.
-  **HOME:** Fast key to go back to main menu.
-  **MENU:** Press to choose function menu of corresponding application in video,music,photo and website.
-  **BACK:** Press to return back to previous menu.
-  **DEL:** Press to delete the unnecessary words.
-  **VOL:** Press to increase/decrease the volume.



Go to previous page or next page.



Fast backward or fast forward.



Number keypad 0-9: Press to input Arabic number.



 **PAUSE:** Press to pause when playing video,music or photo.



 **STOP:** Press to stop playing.